

---

## **C-4555** **(VC4804-00-0000)** **RIBBON** **CABLE CARRIER**

### Mounting Instructions:

1. Mount bracket "A" of the ribbon cable carrier to the rear of the mounting angle using #10-32 x 1/2 PHILIPS PHMS
2. Mount bracket "B" of the ribbon cable carrier to the rear of the chassis. This requires two holes to be drilled in the chassis for a #10-32 Machine Screw.
3. Attach the ribbon or round cable to the steel channel.


### Bill of Material:

1. C-4555 Cable Carrier (1)
2. Hardware Package (1)


### Hardware Package Consists of:

- | Item                    |          |
|-------------------------|----------|
| #10-32x1/2 PHILIPS PHMS | (4 each) |
| #10-32 KEPS NUTS        | (4 each) |

\*\*Subject to change without notice

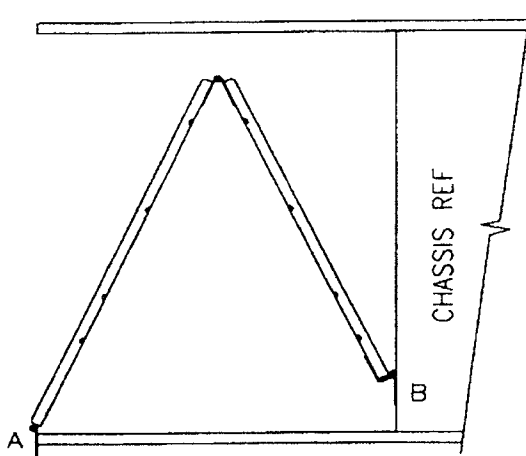

OPEN POSITION

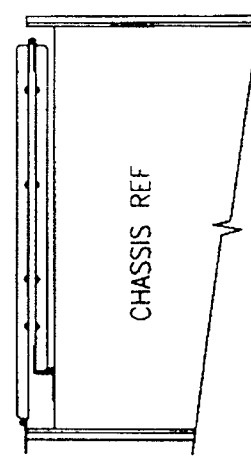

CLOSED POSITION